

# MXR-100/30



## Product Description


The MXR-100/30 is an unipolar water-cooled tube assembly without integrated radiation protection. It comprises a single focal spot, a tungsten anode and a directional beam. The tube is specifically designed for thickness gauging and sorting applications.

## Product Specifications


Nominal tube voltage.....	90 kV
Continuous rating.....	1000W
Focal spot acc. EN 12543.....	d = 5.5 mm
Focal spot acc. ASTM E1165-12.....	N/A
Filament current, max. ....	3.6 A
Filament voltage, typical .....	5.3 V
Inherent filtration .....	0.8 ± 0.1 mm Be
Target material .....	W
Target angle.....	30°
Radiation coverage .....	40° x 40°
Leakage radiation, max. at loading factors in 1m distance .....	2.5 mSv/h (100 kV; 10 mA)
Weight.....	2.1 kg
Terminal type .....	CA11

## Power rating charts

Power rating at given filament current

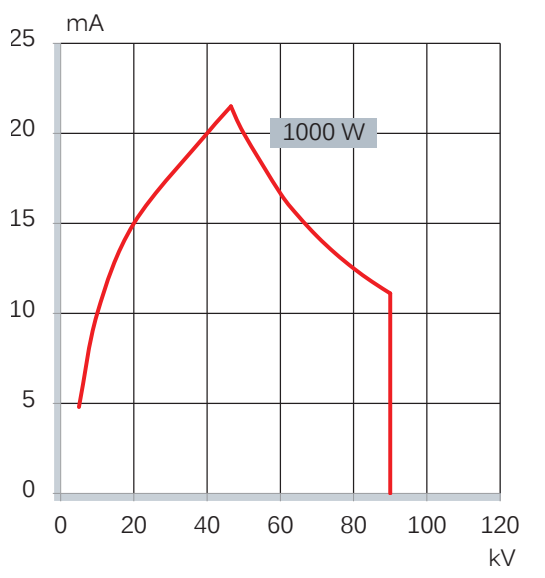


Connection of the filament

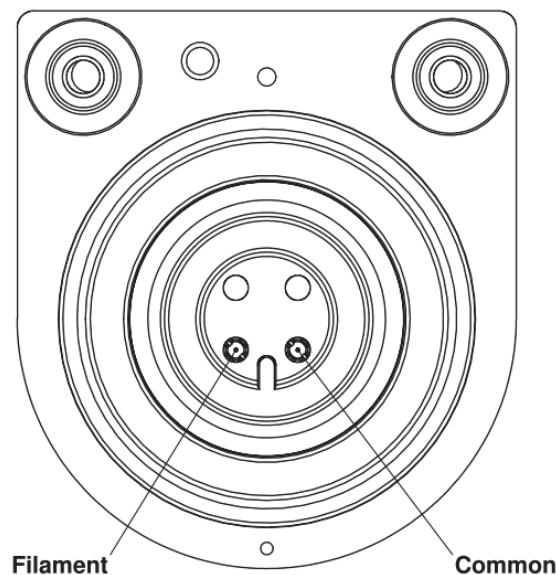

## Cooling

Cooling medium ..... Water  
 Cooling medium flow, min. .... 4 l/min  
 Cooling medium temperature at inlet, max. .... 35°; optimal 20°-35°, no water condensation /  
 kein Kondenswasser  
 Pressure at cooling medium inlet, max. .... 6 bar  
 Post-cooling time after switchoff, min. .... 2 min

## Outline drawing

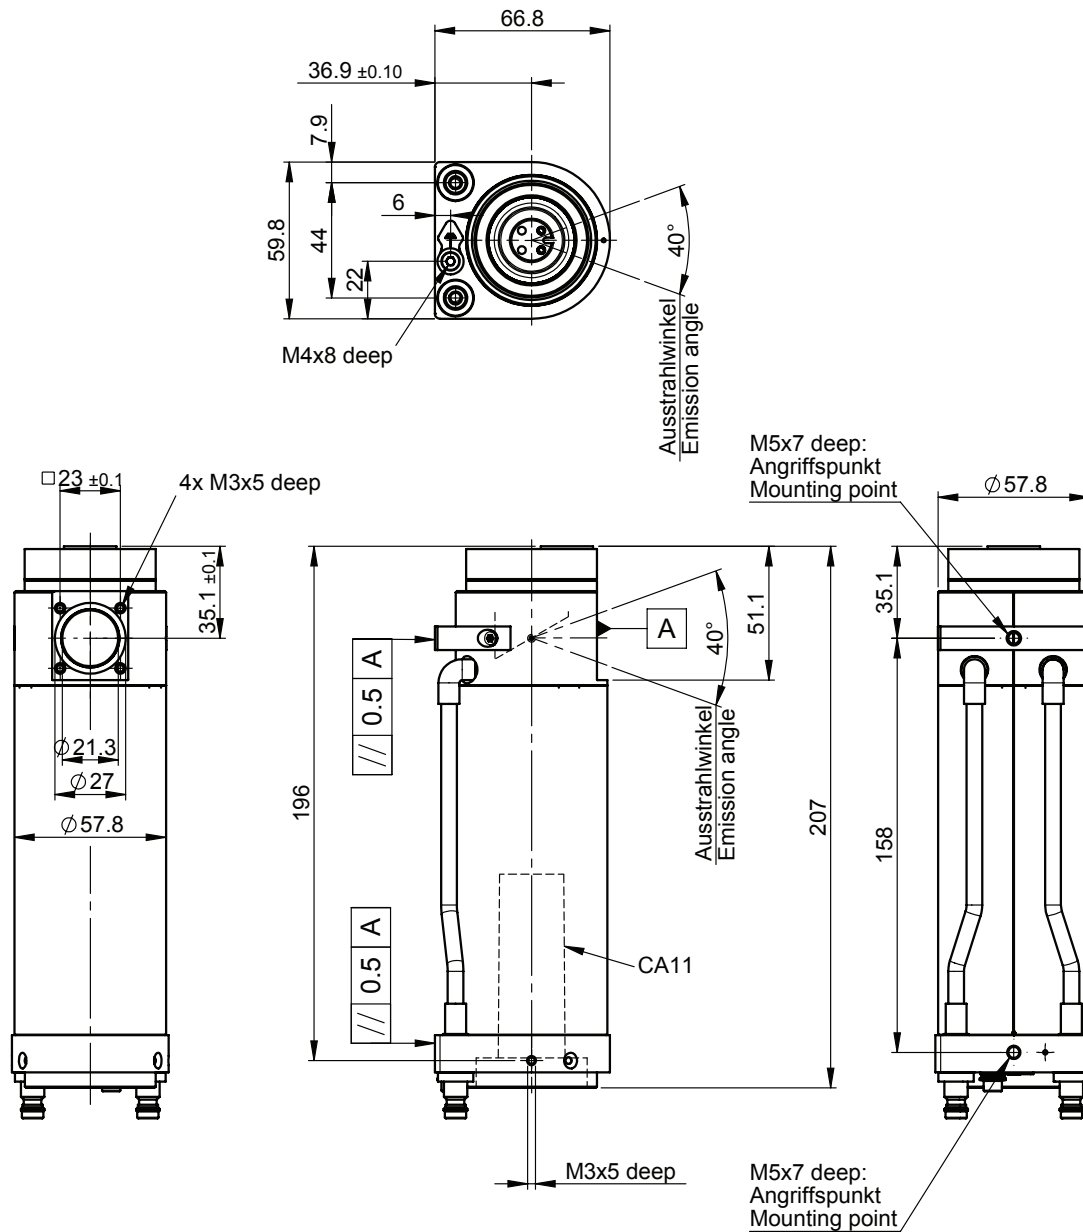

Die radiographischen Kenndaten sind dem Prüfschein des Strahlers zu entnehmen.  
For radiographic characteristics of the tube refer to Final Test Report.

Masse ohne Toleranzangabe sind nur zur Information.  
Dimensions without tolerances are for information only.

## General information

### General

The control of the high voltage and the filament current as well as the design of the cooling system and the radiation protection are within the responsibility of the original equipment manufacturer (OEM). For detailed instructions refer to our „X-Ray Tube Manual“. Provisions in the generator must assure that the X-Ray tube will be protected against overcurrent, over-voltage and lack of cooling. Otherwise the tube and/or the radiation protection may be damaged and become a hazard.

### Cooling

The customer is in charge that the cooling circuit is properly connected to the cooling system. Prior to operating the tube, the coolant must be turned on. Make sure that the coolant flow meets the required cooling conditions. When the tube is switched off, the coolant flow must continue for at least 2 minutes in order to protect the anode and the lead protection from overheating.

### Radiation protection

When installing an X-ray tube assembly into a X-ray equipment and/or operating an X-ray equipment, the responsibility for radiation protection is with the user. Compliance with local regulatory requirements and limit values must be assured. Do not modify the tube assembly itself!

### Return of Goods to COMET

Prior to shipment to COMET a Field Failure Report (FFR) will be required. The completed FFR has to be added to the shipping documents. The FFR can be downloaded from: [www.comet-xray.com/Service](http://www.comet-xray.com/Service)